Operating Instructions and Manual

HeTR BY Ventamatic, Ltd. AN AIR OF EXCELLENCE

SAVE THESE INSTRUCTIONS: Read this instruction manual carefully before installation and use. Keep this manual for future use in case it is needed.

Model H1017 1500 Watt Portable Utility Heater

WARNING! To reduce the risk of fire, electric shock, or personal injury, read all the instructions before using this heater.

SPECIFICATIONS

Model:	**H1017**
Voltage:	120V
Power :	1500W
Current:	12.5A
Required Fuse:	15A
Setting:	25/1500W
Self-Resetting Thermostat:	0-185°F
Size of Heater (mm):	270 x 200 x 310
Weight:	3.9KG

OPERATING INSTRUCTIONS

1. Position the fan heater so that it stands upright on a firm surface and at a safe distance from wet environments and flammable objects.

2. Plug in the fan heater to the outlet.

3. Set the thermostat knob to MAX and let the heater operate with full power.

4. The fan heater will switch on when the heating selector is set to one of the power settings.

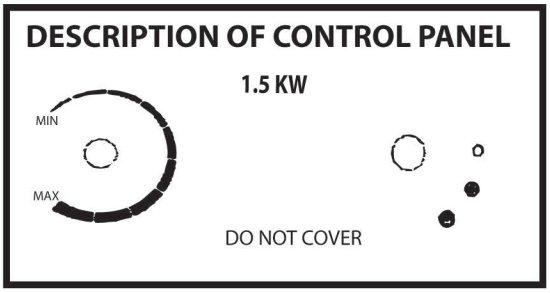

Left Knob: Thermostat dial
Right Knob: Selector with heat setting

5. Once the room reaches the required temperature, the heating element will turn off but the fan will continue to work. Once the temperature decreases, the heating element will turn on again. Use the thermostat dial to select a comforable temperature.

6. The fan heater stops and starts automatically and thus keeps the room temperature constant.

7. Before turning off heater, turn the thermostat to the OFF position and turn the heating knob to Fan or Off, then let the appliance cool down for two minutes.

8. After use, turn off the heater first, then pull out the plug.

MAINTENANCE

1. Before cleaning the appliance, disconnect it from the socket and let it cool down. If the heater enclosure is dirty, wipe it gently with a soft sponge. For other dirty compontents, wipe with a sponge dipped in <113°F water and mild detergent, then dry the heater enclosure with a clean cloth. Be careful not to let water enter the inner parts of the appliance. Never use flammable liquids, solvents, or cleaning solvents to clean the heater, in order to protect the flammable enclosure.

2. Clean the cord and plug, then dry and pack it in a plastic bag.

WARNING:
Do not immerse the heater in water.
Do not use any cleaning chemicals such as detergents or abrasives.
Do not allow the interior to get wet, as this could pose a hazard.

3. When you store the heater, let it cool down first, keeping it dry. Cover it with a plastic bag, then put it in a packing box and store it in a dry, ventilated place.

4. In case of malfunction or doubt, do not try to repair the heater yourself, as it may result in a fire hazard or electric shock.

IMPORTANT SAFEGUARDS

When using an electrical appliance, basic safety precautions should always be observed, including the following:

1. Read all instructions before using the heater.
2. Remove the unit from its packaging and check to make sure it is in good condition before using.
3. Do not let children play with parts of the packaging (such as plastic bags).
4. Check the household voltage to ensure it matches the heater's rated specification.
5. Check the power cord and plug carefully before use to make sure that they are not damaged. If damaged, do not use the heater.
6. Before unplugging the power cord, be sure to turn off the power. When touching the unit be sure your hands are dry to prevent electric shock.
7. Do not use near to, or point the heater at, furniture, curtains, or other inflammable objects. Keep combustible materials such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9m) from the front of the heater and keep them away from the sides and rear.
8. Do not block air intake or exhaust in any manner to prevent a possible fire.
9. Extreme caution is necessary when any heater is used by or near children or mentally impaired, and whenever the heater is left operating and unattended. Do not leave children unattended with the heater.
10. Always unplug the heater when not in use.
11. Prevent water from getting into the housing of the heater during operation or in storage. Always store in a dry area free from potential moisture.
12. Do not use in places where gasoline, paint, or other flammable liquids are used or stored.
13. This heater is not intended for use in bathrooms, laundry areas, or similar indoor locations. Never locate the heater where it may fall into a bath tub or other body of water.
14. Do not run the cord under carpeting. Do not cover the cord with throw rugs, runners, or the like. Arrange the cord away from traffic areas and where it will not be tripped over.
15. Do not use on soft surfaces, like a bed, where openings may become blocked.
16. Do not operate any heater with a damaged cord, damaged plug, after the heater malfunctions, or if it has been dropped or damaged in any manner. Return the heater to an authorized service facility for examination, electrical or mechanical adjustment, or repair.
17. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause electric shock, or exhaust opening as this may cause an electric shock, fire, or damage the heater.
18. This heater is hot when in use. To avoid burns, do not let bare skin touch the hot surfaces. If provided, use handles when moving this heater. Always unplug the heater before moving.
19. Use this heater only as described in this manual. Any other uses not recommended by the manufacture may cause fire, electric shock, or personal injury and may void the warranty.
20. Always plug heaters directly into wall outlet/receptacle. Never use with an extension cord or relocatable tap (outlet/power strip).
21. Do not use outdoors.
22. To disconnect heater, turn controls to off, then remove plug from outlet.
23. **WARNING: RISK OF FIRE** Keep combustible material such as furniture, paper, clothes, and curtains at least 3 feet (0.9m) from the front of the heater and keep them away from the side and rear when the heater is plugged in.
24. Do not place any objects such as furniture, papers, clothes, and curtains closer than 3 feet to the front of the heater and keep them away from the sides and rear when the heater is plugged in.
25. Do not place the heater near a bed because objects such as pillows or blankets can fall off the bed and be ignited by the heater.
26. Never clean this heater while it is plugged in. Do not immerse in water. To disconnect, turn control to OFF, then remove the plug from the outlet by grasping it and pulling it from the outlet.
27. Be sure that no other appliances are in use on the same electrical circuit as your product, as an overload can occur.
28. Connect to properly grounded outlets only.

GROUNDING

This heater is for use with 120 volts. The cord has a plug as shown in Figure A below.

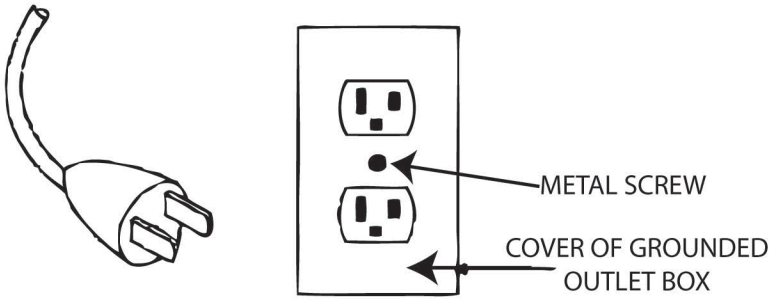

(A)

VENTAMATIC, LTD. LIMITED WARRANTY

Ventamatic, Ltd. extends this warranty to the original retail purchaser of this heater.

The heater is warranted against defects in materials and workmanship for a period of one (1) year from the date of original retail purchase. No other parts or components are warranted. There is no warranty for defects caused by abuse. Repairs or replacement parts supplied under this warranty are warranted only for the period of this warranty; that is, one (1) year from the date of the original retail purchase of the unit. In the event of a defect or malfunction, we will replace or repair the defective part or component only and return the new or repaired part to you freight prepaid. You must bear all other expenses incurred in obtaining repairs, including labor required for field repair or replacement, and the cost of shipping the defective part to us. You must also bear the cost of repair to or replacement of any part or component and the shipping charges incurred for the repair or replacement and return to you of any part or component not covered by this warranty, including parts or components damaged by you.

The company reserves the right to demand and receive written evidence of the date of purchase before undertaking to perform its obligations under this warranty. You should, therefore, retain your sales slip and attach a copy of it to the warranty claim.

In order to obtain the repair or replacement of this unit, you must select one of the following methods:

A. Return to factory.

Return postage prepaid only the part or component which you believe to be defective to the following address:

Ventamatic, Ltd
100 Washington Street
Mineral Wells, TX 76067

Complete and enclose a written claim and attach a copy of your sales slip or other proof of purchase.

B. Return to retail dealer.

There is no informal dispute settling mechanism available in the event of a controversy involving this warranty.

Any and all implied warranties which may exist terminate upon the expiration of this warranty one (1) year from the date of the original retail purchase. Some states do not allow limitations on how long an implied warranty lasts, so this limitation may not apply to you.

Ventamatic, Ltd. is not liable to you for incidental or consequential damages arising out of a defect or malfunction of a unit or its installation or out of any alleged breach of this warranty. Some states do not allow the exclusion or limitation of incidental or consequential damages, so this limitation may not apply to you.

This warranty gives you specific legal rights and you may also have other rights which may vary from state to state.